


INSTALLATION INSTRUCTIONS

MOUNTING THE SP-20S

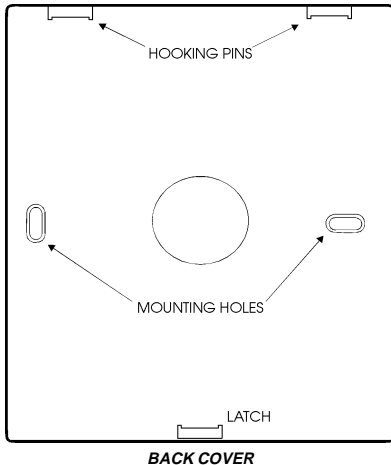

Depress the latch with a screwdriver to separate the two covers.

Secure the back cover to the wall with the screws provided. If the wall is made of drywall or plaster, drill holes into the wall and install the plastic screw inserts provided. Secure the back cover to wall.


Insert the wires through the hole in the back cover.

Align the hooking pins and latch on the back cover with the top cover. Press firmly. The two covers will lock into place.

(See reverse for wiring instructions)

INSTALLATION INSTRUCTIONS

WIRING THE SP-20S

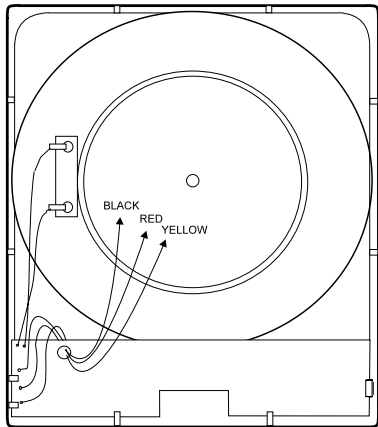

TOP COVER

Pass the hookup wires through the opening in the back cover and connect the wires as follows:

For siren operation:

Connect 9 - 18 VDC positive to the red wire. Connect the ground to the black wire.

For single tone operation:

Connect 9 - 18 VDC positive to the yellow wire. Connect the ground to the black wire.

(See reverse for mounting instructions)